

Sugar-free drink

Diet drink

Diluted soluble cutting oil

Molding agent

# Specially developed for very low concentration solutions, Brix 8% or less!!

**Hand-held Refractometer**  
(For very low concentration samples)

## N-8α

Cat.No.2360


**New**



### Applications

**Food industry :**  
Sugar-Free, Diet drink, very thin soup etc.

**Chemical Industry :**  
Soluble cutting oil diluting more than fifty fold and Mold agent

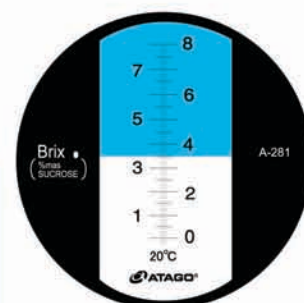

### Features

- Bright, High Contrast scale view
- Scale memory lines are widened to see the boundary line clearly
- Just one or two drops of sample
- Easy and quick measuring

### Specifications

Measurement range: Brix0.0~8.0%  
Minimum scale : 0.1%  
Dimensions : 4(W) × 4(D) × 21(H)cm  
Weight : 260g

### Measuring a sample



①Place a couple of drops of samples onto the prism.



②Close the day-light plate gently.



③Look through the eyepiece and measure the value.

**HACCP G.M.P. G.L.P.** ATAGO products are acknowledged by HACCP, G.M.P. and G.L.P. systems.

\*Specifications and appearance are subject to change without notice.

**ATAGO CO., LTD.**

Headquarters: 32-10, Honcho, Itabashi-ku, Tokyo 173-0001 Japan  
TEL: 81-3-3964-6156 FAX: 81-3-3964-6137  
overseas@atago.net <http://www.atago.net/>



**ATAGO U.S.A., Inc.**

12011 NE First Street, Bldg. C, Suite 110 Bellevue, WA 98005 U.S.A.  
TEL: 1-425-637-2107 FAX: 1-425-637-2110  
customerservice@atago-usa.com <http://www.atago.net/>